
































| | Original | Replacement | Original | Replacement |
|--|----------|---------------|----------|-------------|
| | Power | Power | | |
| | Mute | Mute / Dimmer | | |
| | Vol+ | Vol+ | | |
| | Vol- | Vol- | | |
| | CH+ | CH+ / Page+ | | |
| | CH- | CH- / Page- | | |
| | Back | Back / Return | | |
| | Smart | Smart / List | | |
| | Up | Up | | |
| | Down | Down | | |
| | Left | Left | | |
| | Right | Right | | |
| | OK | OK | | |
| | 3D | 3 | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |





| Original | Replacement |
|--------------|---|
| Power |  Power |
| OK |  OK |
| Up |  Up |
| Down |  Down |
| Right |  Right |
| Left |  Left |
| Back |  Back / Return |
| Vol + |  Vol+ |
| Vol - |  Vol- |
| Home / Smart |  Menu / Home |
| 3D |  +  Shift + 3 |
| Mute |  Mute / Dimmer |
| P + |  CH+ / Page+ |
| P - |  CH- / Page- |
| Ratio |  Picture / Format |
| List |  Smart / List |
| Q.Menu |  D.Menu / Top |

| Original | Replacement |
|----------------|---|
| Subtitle |  Subtitle / EQ |
| Settings |  Setup / OPT / |
| >> |  >>I / Preset+ |
| >> |  >> / Tune+ |
| Play |  Play / Slow |
| AD / PIP |  Sound / Title |
| << |  I<< / Preset- |
| << |  << / Tune- |
| Rec |  Rec / Rec Mode |
| Pause |  Pause / Step / Freeze |
| Text |  Text / Goto |
| FAV |  Fav / Marker / PC |
| Exit |  Exit / Cancel / Clear |
| Input |  AV / Input / RDS |
| Blue |  Blue / Prime Video / Random |
| Yellow |  Yellow / YouTube / Repeat |
| Stop / Live TV |  Stop / Hold |



