































	Original	Replacement	Original	Replacement
	Power	Power		
	Mute	Mute / Dimmer		
	Vol+	Vol+		
	Vol-	Vol-		
	CH+	CH+ / Page+		
	CH-	CH- / Page-		
	Back	Back / Return		
	Smart	Smart / List		
	Up	Up		
	Down	Down		
	Left	Left		
	Right	Right		
	OK	OK		
	3D	3		





Original	Replacement
Power	 Power
OK	 OK
Up	 Up
Down	 Down
Right	 Right
Left	 Left
Back	 Back / Return
Vol +	 Vol+
Vol -	 Vol-
Home / Smart	 Menu / Home
3D	 +  Shift + 3
Mute	 Mute / Dimmer
P +	 CH+ / Page+
P -	 CH- / Page-
Ratio	 Picture / Format
List	 Smart / List
Q.Menu	 D.Menu / Top

Original	Replacement
Subtitle	 Subtitle / EQ
Settings	 Setup / OPT /
>>	 >>I / Preset+
>>	 >> / Tune+
Play	 Play / Slow
AD / PIP	 Sound / Title
<<	 I<< / Preset-
<<	 << / Tune-
Rec	 Rec / Rec Mode
Pause	 Pause / Step / Freeze
Text	 Text / Goto
FAV	 Fav / Marker / PC
Exit	 Exit / Cancel / Clear
Input	 AV / Input / RDS
Blue	 Blue / Prime Video / Random
Yellow	 Yellow / YouTube / Repeat
Stop / Live TV	 Stop / Hold





Original	Replacement
AV Mode	+ Shift + AV / Input / RDS
Green	Green / APP / Repeat
Red	Red / Netflix / Search
0	0
AD	Audio / Lang I/II
TV / PC	+ Shift + Fav / Marker / PC
Search	+ Shift + Red / Netflix /
App	+ Shift + Green / APP /
TV / Radio	TV/Radio /
Guide	Guide / EPG / -/--
Info	Info / Angle
Recent	Sleep / Timer
9	9
8	8
7	7
Live Menu	Display / Media
6	6

Original	Replacement
5	5
Q.View	+ Shift + Display / Media
4	4
Live Zoom	Zoom / Size
3	3
2	2
1	1
T.Opt	+ Shift + Setup / OPT / Tools
Energy Saving	Eject / Surround
My APPS	+ Shift + Smart / List

