

 

 


 
 
 
 
 
 
 
 

 
 

 
 
 



 

 

 



 










 



 









 







 













Original	Replacement
 Power	 Power
 Off Timer	 Sleep / Timer
 Input Tv	 Shift + AV / Input / RDS
 Input Av	 AV / Input / RDS
 Audio	 Audio / Lang I/II
 Aspect	 Picture / Format
 N	 Shift + Up
 oo/Surround	 Sound / Title
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Media Player	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 Ok	 OK
 Right	 Right

Original	Replacement
 Option	 Setup / OPT /
 Down	 Down
 ←/Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Sttl	 Subtitle / EQ
 Index	 Smart / List
 Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Replacement	Original	Replacement
 7	 7	 Pause/Still	 Pause / Step / Freeze
 8	 8	 Rec	 Rec / Rec Mode
 9	 9		
 Mute	 Mute / Dimmer		
 0	 0		
 ↔/Last View	 Shift + Back / Return		
 Vol +	 Vol+		
 Pr +	 CH+ / Page+		
 Vol -	 Vol-		
 Pr -	 CH- / Page-		
 Power ↓	 Shift + Power		
 Programme ▼	 Shift + CH- /		
 Programme ▲	 Shift + CH+ /		
 I<<	 I<< / Preset-		
 Play	 Play / Slow		
 I>>	 >>I / Preset+		
 Stop	 Stop / Hold		

Original	Replacement	Original	Replacement
 Pause/Still	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		

