



 
 















 

 

















 



 







 


 







 

 




 







 


 
 

 





 








Original	Replacement	Original	Replacement
 Power	 Power	 Tv Menu	 Menu
 Mute	 Mute	 -/--	 Shift + Guide
 1	 1	 Guide	 Guide
 2	 2	 Source	 AV
 3	 3	 Enter	 Ok
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 CH-	 Ch -
 9	 9	 CH+	 Ch +
 0	 0	 Vol-	 Vol -
 Recall	 Pre Ch	 Vol+	 Vol +
 Audio/Nicam	 Dual	 Text	 Text
 Display	 Shift + Info	 <<	 <<
 Exit	 Exit	 >>	 >>
 Auto	 Smart	 Hold	 Options





Original	Replacement
 Index	 Info
 I<<	 I<<
 Size	 Format
 >>I	 >>I
 Play/Pause	 Play
 Stop/Subpage	 Stop
 Zoom/Reveal	 3D
 Sleep	 Sleep
 Rec	 Rec
 Media	 Media
 Repeat/FAV-	 Shift + Text
 FAV	 Shift + Pre Ch
 FAV+	 Shift + AV
 Subtitle	 Subt
 Tv/Radio	 TV/R
 Red	 Red
 Green	 Green

Original	Replacement
 Yellow	 Yellow
 Blue	 Blue
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual

