



 


 
 
 
 

 

 



 
 
 

 
 
 


 
 



 

 
 
 



 
 

 
 

 





 
 


 
 


 
 










Original	Replacement	Original	Replacement
	Power		Power
	HDMI/Control		Smart
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Red/Zoom/↑ ↓		Red
	Green/Repeat/↓		Green
	Yellow/Root		Yellow
	Blue/Title		Blue
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	Internet/PIP		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Info		Info
	Source		AV
	OK		Ok
	Up		Up
	Down		Down





Original	Replacement
 Right	 Right
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Mute	 Mute
 Return	 Back
 Swap	 Pre Ch
 FAV	 Shift + Pre Ch
 EPG	 Guide
 Sleep	 Sleep
 Search Mode	 Shift + AV
 Ball/Angle	 Options
 Display	 Shift + Info
 Presets	 TV/R

Original	Replacement

