


 
 

 
 






Original	Replacement
	 Power
	 Mute / Dimmer
	 Info / Angle
	 Shift + Info / Angle
	 Picture / Format
	 Zoom / Size
	 Smart / List
	 Sound / Title
	 Setup / OPT /
	 Menu / Home
	 1
	 2
	 3
	 4
	 5
	 6
	 7

Original	Replacement
	 8
	 9
	 Sleep / Timer
	 0
	 Shift + Text /
	 Rec / Rec Mode
	 Stop / Hold
	 Subtitle / EQ
	 Audio / Lang I/II
	 << / Tune-
	 >> / Tune+
	 Shift + Yellow / YouTube /
	 Shift + Green / APP /
	 >>I / Preset+
	 Vol+
	 Play / Slow
	 Vol-





Original		Replacement		Original		Replacement	
	I<</Prev		I<< / Preset-				
	Home		D.Menu / Top				
	Up		Up				
	X/Return		Back / Return				
	Left		Left				
	Enter		OK				
	Right		Right				
	Select		Fav / Marker / PC				
	Down		Down				
	Wuaki TV		Display / Media				
	Red		Red / Netflix / Search				
	Green/EPG		Green / APP / Repeat				
	Green/EPG		Guide / EPG / -/--				
	Yellow/TTX		Yellow / YouTube / Repeat				
	Yellow/TTX		Text / Goto				
	Blue		Blue / Prime Video / Random				

