





 




Original	Replacement
 Source	 AV / Input / RDS
 Sync Menu	 D.Menu / Top
 Power	 Power
 Digital/Analog	 Display / Media
 Audio	 Audio / Lang I/II
 [+]	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [≡]	 Text / Goto
 0	 0

Original	Replacement
 [...]	 Subtitle / EQ
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/--
 Up	 Up
 [i+]/[?]	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Vol+	 Vol+
 Recall	 Fav / Marker / PC





	Original	Replacement	Original	Replacement
	Prog+	CH+ / Page+		
	Vol-	Vol-		
	Mute	Mute / Dimmer		
	Prog-	CH- / Page-		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		
	I<<	I<< / Preset-		
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	>>I	>>I / Preset+		

