




 

 
 


 




 



 







 


 

 
 
 














 







Original	Replacement
 Input	 AV / Input / RDS
 Sync Menu	 D.Menu / Top
 Power	 Power
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Digital/Analog	 Display / Media
 [+]	 Zoom / Size
 Scene	 Smart / List
 Audio	 Audio / Lang I/II
 Guide	 Guide / EPG / -/--
 [i+]/[?]	 Info / Angle
 Up	 Up

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





	Original	Replacement	Original	Replacement
	7	 7		
	8	 8		
	9	 9		
	[≡]/Text	 Text / Goto		
	0	 0		
	[...]	 Subtitle / EQ		
	Vol+	 Vol+		
	CH+	 CH+ / Page+		
	Vol-	 Vol-		
	CH-	 CH- / Page-		
	Mute	 Mute / Dimmer		
	Back/Recall	 Fav / Marker / PC		

