 

 



 

 

 





 

 

 



 

 

 









Original	Replacement
 Power	 Power
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV CH	 Fav / Marker / PC
 0	 0
 PRE-CH	 Back / Return
 Info	 Info / Angle
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/--

Original	Replacement
 Tools	 Setup / OPT /
 Return	 Shift + Back / Return
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 CH List	 Smart / List
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Source	 AV / Input / RDS
 PR+	 CH+ / Page+
 Vol-	 Vol-





Original	Replacement
	Mute / Dimmer
	CH- / Page-
	Text / Goto
	Display / Media
	Zoom / Size
	Audio / Lang I/II
	Sound / Title
	Subtitle / EQ
	<< / Tune-
	Pause / Step / Freeze
	>> / Tune+
	Rec / Rec Mode
	Play / Slow
	Stop / Hold

Original	Replacement

