



 



 





 



 






















 








 

 











 








Original		Replacement		Original		Replacement	
	Power		Power		Rec		Rec / Rec Mode
	Source		AV / Input / RDS		<<		<< / Tune-
	1		1		Stop		Stop / Hold
	2		2		Play		Play / Slow
	3		3		Pause		Pause / Step / Freeze
	4		4		>>		>> / Tune+
	5		5		Vol+		Vol+
	6		6		P+		CH+ / Page+
	7		7		Mute		Mute / Dimmer
	8		8		Vol-		Vol-
	9		9		P-		CH- / Page-
	-/--		Shift + Guide / EPG / -/--		Menu		Menu / Home
	0		0		Exit		Exit / Cancel / Clear
	PRE-CH		Fav / Marker / PC		Up		Up
	Tv/DTV		TV/Radio /		Left		Left
	CH.List		Smart / List		Enter/OK		OK
	D.Menu		D.Menu / Top		Right		Right





Original	Replacement
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Replacement

