 

 

 

 

 
 




 

 

 
 
 
 
 

 

 




 






| Original | Replacement |
|--|---|
|  Power |  Power |
|  Eject |  Eject |
|  Tv/VCR |  TV/R |
|  AV |  AV |
|  CM Skip |  Options |
|  ez Power Off |  Smart |
|  ez Repeat |  Text |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |

| Original | Replacement |
|--|--|
|  << |  << |
|  Play |  Play |
|  >> |  >> |
|  Pause/Still |  Pause |
|  Stop |  Stop |
|  LP |  Media |
|  C.Lock |  Back |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  i |  Info |
|  OK/CLK/CNT |  Ok |
|  Clear |  Exit |
|  Rec/OTR |  Rec |

