
 



 
 
 
 



 











 
 
 

 








 














 

 









 


Original	Replacement
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Key Up	 Ch +
 Key Down	 Ch -
 Zoom	 Shift + Eject
 Display	 Info
 Echo Up	 Shift + Ch +

Original	Replacement
 Echo Down	 Shift + Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Setup	 Options
 Mute	 Mute
 Clear	 Exit
 Prog	 Sleep
 Subtitle	 Subt
 Language	 Dual
 Title-Return	 Back
 A-B	 TV/R
 Pause	 Pause





	Original	Replacement	Original	Replacement
	Play	 Play		
	Stop	 Stop		
	<<	 <<		
	>>	 >>		
	I<<	 I<<		
	>>I	 >>I		
	Angle	 Red		
	Time	 Shift + AV		
	Repeat	 Text		
	Karaoke	 Power		
	PBC	 Smart		
	R/L	 3D		
	N/P	 AV		
	Step	 Media		
	Slow	 Yellow		

