 


 
 



 


 



 
 


 



 

 





 



 

 




 



 



 







 



 



 


















 
 





 









Original	Replacement	Original	Replacement
 Power	 Power	 1	 1
 Source	 AV	 2	 2
 P+	 Ch +	 3	 3
 P-	 Ch -	 4	 4
 Vol+	 Vol +	 5	 5
 Vol-	 Vol -	 6	 6
 I-II/Audio	 Dual	 7	 7
 Mute	 Mute	 8	 8
 OK	 Ok	 9	 9
 Up	 Up	 0/10	 0
 Down	 Down	 List/+10	 List
 Right	 Right	 Back/Program	 Back
 Left	 Left	 Tv/Radio	 TV/R
 Text	 Text	 FAV	 Pre Ch
 Sleep	 Sleep	 EPG	 Guide
 Tv Menu	 Menu	 Setup	 Options
 Exit	 Exit	 DVD Menu	 D. Menu





Original	Replacement	Original	Replacement
 Repeat	 Shift + Text	 >>	 >>
 S.Mode	 Shift + Dual	 <<	 <<
 P.Mode	 Format	 <<	 <<
 Info	 Info	 >>	 >>
 Zoom/Size	 Shift + Eject	 Angle	 Shift + Options
 Subtitle	 Subt	 Goto	 Shift + Back
 D.Dis/Reveal	 Smart	 Step	 Shift + Subt
 Slow/Cancel	 3D		
 A-B/Index	 Media		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Play	 Play		
 Stop/Mix	 Stop		
 Open/Close/Subp	 Eject		
 Pause/Hold	 Pause		

