

 





 



 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Sleep	 Sleep	 Vol-	 Vol -
 CBL/SAT	 1	 Eco	 3D
 DVD	 2	 Info	 Info
 Blu-ray	 3	 Option	 Options
 Game	 4	 Back	 Back
 AUX	 5	 Setup	 Menu
 Media Player	 6	 Enter	 Ok
 USB	 7	 Up	 Up
 TV Audio	 8	 Down	 Down
 Tuner	 9	 Right	 Right
 Bluetooth	 Guide	 Left	 Left
 Internet Radio	 0	 Play	 Play
 Mute	 Pre Ch	 Pause	 Pause
 CH/Page+	 Mute	 I<</Tune-	 I<<
 CH/Page-	 Ch +	 >>I/Tune+	 >>I
	 Ch -	 Green/Movie	 Green




 

 


 
 



 

 

 

 

 















 


 
 






Original	Replacement	Original	Replacement
 Red/Music	 Red		
 Blue/Game	 Blue		
 Yellow/Pure	 Yellow		
 Quick Select 1	 D. Menu		
 Quick Select 2	 Text		
 Quick Select 3	 Eject		
 Quick Select 4	 AV		





Original	Replacement
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX	 5
 Media Player	 6
 USB	 7
 TV Audio	 8
 Tuner	 9
 Bluetooth	 0
 Internet Radio	 Pre Ch
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Vol+	 Vol +

Original	Replacement
 Vol-	 Vol -
 Mute	 Mute
 Back	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Play	 Play
 Pause	 Pause
 I<</Tune-	 I<<
 >>I/Tune+	 >>I
 Quick Select 1	 D. Menu
 Quick Select 4	 AV
 Quick Select 3	 Eject
 Quick Select 2	 Text

