











 

 

 



















 



 







 



 

 



 



 






 


Original	Replacement
Power	Power
Stereo/Mono	Shift + Sound / Title
Tv/Video	TV/Radio /
Memory	Smart / List
Muting	Mute / Dimmer
1	1
2	2
3	3
Function	Setup / OPT /
4	4
5	5
6	6
Band	Audio / Lang I/II
7	7
8	8
9	9
Sound/Field	Sound / Title

Original	Replacement
0/10	0
+10	Guide / EPG / -/-
Display	Display / Media
Vol+	Vol+
Vol-	Vol-
Tv CH-	CH- / Page-
Tv CH+	CH+ / Page+
Enter	OK
AMP Menu	Menu / Home





Original	Replacement	Original	Replacement
	Power		Power
	Muting		Mute / Dimmer
	Play Mode		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<</Tuning-/<l		<< / Tune-
	Tuning+/Slow		>> / Tune+
	I<</Preset-		I<< / Preset-
	>>I/Preset+		>>I / Preset+
	Sound Field		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Open/Close		Eject / Surround
	Band		Picture / Format
	Name		Zoom / Size
	Time		Sleep / Timer
	Tv/Video		TV/Radio /
	DVD Menu		D.Menu / Top
	Function		Setup / OPT /
	AMP Menu		Menu / Home
	Up		Up
	Angle		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Memory		Smart / List
	Vol-		Vol-
	Display		Display / Media
	1		1
	2		2



Program

