



Original	Replacement
Power	Power
Stereo/Mono	Shift + Sound / Title
Tv/Video	TV/Radio /
Memory	Smart / List
Muting	Mute / Dimmer
1	1
2	2
3	3
Function	Setup / OPT /
4	4
5	5
6	6
Band	Audio / Lang I/II
7	7
8	8
9	9
Sound/Field	Sound / Title

Original	Replacement
0/10	0
+10	Guide / EPG / -/-
Display	Display / Media
Vol+	Vol+
Vol-	Vol-
Tv CH-	CH- / Page-
Tv CH+	CH+ / Page+
Enter	OK
AMP Menu	Menu / Home







































Original	Replacement	Original	Replacement
	Power		DVD Menu
	Muting		Function
	Play Mode		AMP Menu
	Pause		Up
	Stop		Angle
	<</Tuning-/<l		Left
	Tuning+/Slow		Enter
	I<</Preset-		Right
	>>I/Preset+		Clear
	Sound Field		Down
	Audio		Return
	Subtitle		Vol+
	Open/Close		Memory
	Band		Vol-
	Name		Display
	Time		1
	Tv/Video		2
			D.Menu / Top
			Setup / OPT /
			Menu / Home
			Up
			Info / Angle
			Left
			OK
			Right
			Exit / Cancel / Clear
			Down
			Back / Return
			Vol+
			Smart / List
			Vol-
			Display / Media
			1
			2



Program



Original	Replacement
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10/0	 Guide / EPG / -/--
 0/10	 0
 Repeat	 Green / APP / Repeat
 Dimmer	 Shift + Mute / Dimmer
 Play/Select	 Shift + Play /
 Title	 Shift + Sound / Title
 Stereo/Mono	 Shift + Audio / Lang I/II
 Enter	 Shift + OK
 DVD Display	 Shift + 2
 DVD Setup	 Shift + 3

Original	Replacement

