 
 
 




 
 


Original	Replacement
 Power	 Power
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 PopUp Menu/Disc Menu	 D.Menu / Top
 Home	 Menu / Home
 Top Menu	 Picture / Format
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 :≡	 Smart / List
 :≡	 Setup / OPT /
 Play	 Play / Slow

Original	Replacement
 Pause	 Pause / Step / Freeze
 I<	 I<< / Preset-
 Stop	 Stop / Hold
 Eject	 Eject / Surround
 >I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Subtitle	 Subtitle / EQ




**Original**
**Replacement**

	0		0
	Audio		Audio / Lang I/II

**Original**
**Replacement**