

 



 

 



 



 



 



 





 

 

 

 

 

 







 



 



 



 



 







Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Input 1	 Shift + 1	 P+	 CH+ / Page+
 Input 2	 Shift + 2	 I-II	 Audio / Lang I/II
 Input 3	 Shift + 3	 Vol+	 Vol+
 Input 4	 Shift + 4	 P-	 CH- / Page-
 [\leftarrow]/[\equiv]	 Picture / Format	 Mute	 Mute / Dimmer
 [$\left $ > < / [\equiv +]	 Zoom / Size	 Vol-	 Vol-
 1	 1	 Return	 Back / Return
 2	 2	 Up	 Up
 3	 3	 Home Menu	 Menu / Home
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 [i+]/Timer	 Sleep / Timer	 Yellow	 Yellow / YouTube / Repeat



