 



 
 


 
 






 




 


 
 

 
 
 





 







 




 


 




 

 

 



 



 
 




 






Original	Replacement	Original	Replacement
 Standby	 Power	 Stop Rec	 Shift + Stop
 HDD/DVD	 Media	 I<</Prev	 I<<
 Pause Live Tv	 Shift + Pause	 Channel-	 Ch -
 Home Menu	 Smart	 >>I/Next	 >>I
 Info	 Info	 Channel+	 Ch +
 Disc Navigator/Top	 List	 Timer Rec	 Shift + AV
 Guide	 Guide	 Red	 Red
 Up	 Up	 Green	 Green
 Right/CM Skip →	 Right	 Yellow	 Yellow
 Down	 Down	 Blue	 Blue
 Left/CM Back ←	 Left	 A.T.V/D.T.V	 Options
 Enter	 Ok	 <</><I	 <<
 Pause	 Pause	 >>/I>	 >>
 Return	 Back	 Help	 Exit
 Rec	 Rec	 Tv/DVD	 TV/R
 Play	 Play	 Rec Mode	 Shift + Rec
 Stop	 Stop	 1	 1





Original	Replacement
 2	 2
 3	 3
 4	 4
 Audio	 Dual
 5	 5
 Subtitle	 Subt
 6	 6
 Angle	 3D
 7	 7
 8	 8
 9	 9
 Play Mode	 Shift + Play
 0	 0
 Shift	 Sleep
 Clear	 Shift + Exit
 One Touch	 Format
 Input Select	 AV

Original	Replacement
 Menu	 Menu
 Display	 Shift + Info
 Text	 Text

