





 

 

 

 

 

 

 

Original	Replacement		
	Power		Power
	Mute		Mute / Dimmer
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	-/--		Shift + Guide / EPG / -/--
	9		9
	0		0

Original	Replacement		
	Recall		Back / Return
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Tv/Radio		TV/Radio /
	Guide		Guide / EPG / -/--
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Source		AV / Input / RDS
	Up		Up
	Aspect		Shift + Picture / Format





Original	Replacement
	 Left
	 OK
	 Right
	 Display / Media
	 Down
	 Exit / Cancel / Clear
	 Text / Goto
	 Rec / Rec Mode
	 Info / Angle
	 Shift + Stop /
	 Eject / Surround
	 Subtitle / EQ
	 Setup / OPT /
	 CH+ / Page+
	 Zoom / Size
	 Vol-
	 Menu / Home

Original	Replacement
	 Vol+
	 Shift + Exit / Cancel / Clear
	 CH- / Page-
	 Smart / List
	 Fav / Marker / PC
	 D.Menu / Top
	 Shift + Display / Media

