

 

 



 
 


 
 



 


 







 

 

 

 

 

 

 

 

 

 

 



 

 



 

 











Original	Replacement	Original	Replacement
 Standby	 Shift + Power	 A/B/C/D/E	 AV / Input / RDS
 Power	 Power	 < Preset	 I<< / Preset-
 Scene 1	 Red / Netflix / Search	 Preset >	 >>I / Preset+
 Scene 2	 Green / APP / Repeat	 Sleep	 Sleep / Timer
 Scene 3	 Yellow / YouTube / Repeat	 Level	 Smart / List
 Scene 4	 Blue / Prime Video / Random	 Up	 Up
 CD	 3	 Menu	 Menu / Home
 MD/CD-R	 4	 Audio Sel	 Audio / Lang I/II
 Tuner	 6	 Left	 Left
 Multi CH In	 8	 Enter	 OK
 DVD	 2	 Right	 Right
 DTV/CBL	 1	 Night	 Exit / Cancel / Clear
 DVR	 5	 Return	 Back / Return
 V-AUX	 7	 Down	 Down
 Vol-	 Vol-	 Display	 Display / Media
 Mute	 Mute / Dimmer	 Sur. Decode	 Sound / Title
 Vol+	 Vol+	 Straight	 Text / Goto





	Original	Replacement	Original	Replacement
	< Prog	 CH- / Page-		
	Prog >	 CH+ / Page+		
	Enhancer	 TV/Radio /		
	Info	 Info / Angle		
	EON	 Setup / OPT /		
	Mode-PTY	 Picture / Format		
	Seek-Start	 D.Menu / Top		

