













 

 













Original	Replacement
 Power	 Power
 [≡]	 Text
 Sleep	 Sleep
 Color	 Options
 [ + ]/◆	 Info
 ?	 Smart
 16:9/[+]	 Format
 I-II/[≡i]	 Dual
 (<>)/X	 Exit
 Up	 Up
 P+	 Ch +
 P-	 Ch -
 Down	 Down
 Right	 Right
 Vol+	 Vol +
 Left	 Left
 Vol-	 Vol -

Original	Replacement
 Menu	 Menu
 Menu	 Ok
 Inst	 Media
 Source	 AV
 P<P	 Pre Ch
 Red/Picture	 Red
 Picture	 Shift + Format
 Green/Sound	 Green
 Sound	 Shift + Dual
 Yellow/Timer	 Yellow
 Timer	 Shift + AV
 Blue/Headphon	 Blue
 Headphones	 List
 1	 1
 2	 2
 3	 3
 4	 4





	Original	Replacement		Original	Replacement
	5	5			
	6	6			
	7	7			
	8	8			
	9	9			
	0	0			
	PP	PP			
	Mute	MUTE			

