 

 
 
 

 
 
 
 
 
 
 

 
 
 



 



 



 

 

 



 


 
 






 
 


 






 
 





 

 


 
 
 
 



 

 
 
 
 








Original	Replacement	Original	Replacement
 On/Standby	 Power	 Sleep	 Sleep
 Open/Close	 Eject	 Bass/Treble	 Options
 1	 1	 X-Bass	 Dual
 2	 2	 Random	 Subt
 3	 3	 <</I<</Tuning	 <<
 4	 4	 >>/>>I/Tuning	 >>
 5	 5	 Folder	 Text
 6	 6	 Demo/Dimmer	 Info
 7	 7	 Preset Up	 Up
 8	 8	 Preset Down	 Down
 9	 9	 Enter	 Ok
 0	 0	 Vol+	 Vol +
 10+	 Guide	 Vol-	 Vol -
 Back/Repeat	 Back	 Mute	 Mute
 Memory	 Smart	 CD	 Yellow
 Clear	 Exit	 USB	 Green
 Clock/Timer	 AV	 Tuner	 Blue





Original		Replacement		Original	Replacement
	Input/Audio/Line		Red		
	iPod		3D		
	(Tv Out)/Display		TV/R		
	Menu		Menu		
	Play/Pause iPod		Play		
	Display CD/USB		Right		
	Stop CD/USB		Stop		
	Play/Pause		Pause		
	ASPM RDS		D. Menu		
	PTY RDS		Format		
	Display RDS		Left		
	Network		Media		

