



Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 TV	 TV/R	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 CH List	 List
 3	 3	 Menu	 Menu
 4	 4	 FAV CH	 Shift + Pre Ch
 5	 5	 Tools	 Options
 6	 6	 Return	 Back
 7	 7	 Info	 Info
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Enter	 Smart	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Vol+	 Vol +	 OK	 Ok
 Vol-	 Vol -	 Red	 Red
 Mute	 Mute	 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 TTX/Mix	 Text		
 Media.P	 Media		
 P.Size	 Format		
 Dual	 Dual		
 Guide	 Guide		
 Subt.	 Subt		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

