








 

 
 
 


Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Pic Size		Format
	Pic Mode		Shift + Format
	Sleep		Sleep
	Dual I-II		Dual
	S.Mode		Shift + Dual
	Still		Shift + Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	PRE-CH		Pre Ch
	Keylock		Shift + TV/R
	PIP		3D
	P.Input		Subt
	P.Position		List
	P.Size		Shift + Eject
	P.Swap		Options
	TV		TV/R
	PC/HDMI		Media
	AV/Sel		Smart
	Source		AV
	Menu		Menu
	Exit		Exit
	TTX/On		Text
	Mix		Shift + Pre Ch





Original	Replacement
 PR+	 Ch +
 PR-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Store	 Rec
 Flop/List	 Info
 Hold	 Guide
 Size	 Eject

Original	Replacement
 Cancel	 Shift + Back
 Index	 Back
 Time	 Shift + AV
 Reveal	 D. Menu
A1	 Shift + 1
A2	 Shift + 2
A3	 Shift + 3
A4	 Shift + 4
A5	 Shift + 5
B1	 Shift + 6
B2	 Shift + 7
B3	 Shift + 8
B4	 Shift + 9
B5	 Shift + 0

