





 







 

 
 
 

 


 
 
 
 
 

 
 

 



 
 
 

 

 



 

 
 


 



 
 
 

 
 










Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 Power Tv	 Shift + Power	 Display	 Info
 Input Tv	 AV	 Yellow	 Yellow
 Open / Close	 Eject	 Blue	 Blue
 1	 1	 Red	 Red
 2	 2	 Green	 Green
 3	 3	 Top Menu	 Shift + Menu
 4	 4	 Pop Up Menu	 Menu
 5	 5	 Return	 Back
 6	 6	 Options	 Options
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Audio	 Dual	 OK	 Ok
 Subtitle	 Subt	 Home	 Smart
 Vol +	 Vol +	 I<<	 I<<





Original		Replacement		Original		Replacement	
	Pause		Pause				
	>>		>>				
	<<		<<				
	Play		Play				
	>>		>>				
	Stop		Stop				
	Netflix		Media				
	SEN		TV/R				

