











 










 












 





	Original	Replacement		Original	Replacement
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Shift + Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Format
	Tv Menu		Menu		Eject
	Source		AV		Tv/Radio
	ChList		List		Text





	Original	Replacement		Original	Replacement
	 Epg	 Guide		 I<<	 I<<
	 Fav	 Pre Ch		 >>I	 >>I
	 Info	 Info		 Play	 Play
	 Red	 Red		 Pause	 Pause
	 Green	 Green		 Stop	 Stop
	 Yellow	 Yellow		 Rec/Rep	 Rec
	 Blue	 Blue			
	 Reveal	 Media			
	 Hold	 D. Menu			
	 Index	 Shift + Info			
	 Subpage	 Shift + AV			
	 List	 Smart			
	 Mix	 Options			
	 Subtitle	 Subt			
	 Size	 3D			
	 <<	 <<			
	 >>	 >>			

