












Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Mute / Dimmer
	 Info / Angle
	 Menu / Home

Original	Replacement
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Display / Media
	 Zoom / Size
	 D.Menu / Top
	 Red / Netflix / Search
	 Green / APP / Repeat



























 

 

 









 













 

 

 

 

 



 





Original	Replacement	Original	Replacement
	Yellow/Pause/<		
	Blue/>>>		







Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	PIP		Smart / List
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	i		Info / Angle
	Z		Menu / Home
	P+		CH+ / Page+
	P+		Up
	-		Left
	-		Vol-
	OK		OK
	+		Right
	+		Vol+
	TXT		Text / Goto
	P-		CH- / Page-
	P-		Down
	AV		AV / Input / RDS
	Scan/[']		Setup / OPT /
	PAP/PAUSE		Pause / Step / Freeze
	SIZE/STOP		Stop / Hold
	Pos/PLAY		Play / Slow
	Red/ <		<< / Preset-
	Green/>		>>  / Preset+
	Yellow/PAUSE/<		<< / Tune-




























 

 



Original	Replacement
 Blue/>>	 >> / Tune+

Original	Replacement





Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Mute / Dimmer
	 Info / Angle
	 Menu / Home





Original	Replacement
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 OK
	 Vol+
	 Right
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+





Original

Replacement



















 








	Yellow/<<		<< / Tune-
	Blue/>>>		>> / Tune+







 




 











 

 

 
 



Original

Replacement








Original	Replacement
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Info / Angle
	 Menu / Home
	 CH+ / Page+

Original	Replacement
	 Up
	 Vol-
	 Left
	 OK
	 Vol+
	 Right
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-





Original	Replacement
 Blue/>>	 >> / Tune+

Original	Replacement

