



 

 








 

 
 
 


 

 

 

 









 

 


 

 







 
 
 
 
 
 













 

 

 








 





Original	Replacement	Original	Replacement
	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune- / Play / Slow
	Play		>> / Tune+ / Play / Slow
	[[[ / ]]]		Zoom / Size
	*		D.Menu / Top
	[<>]		Picture / Format
	Tv Guide		Guide / EPG / -/--
	Search		Shift + Red / Netflix /
	Sources		AV / Input / RDS
	Smart Tv		Smart / List
	Home		Menu / Home
	Exit/Tv		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	i+/Info		Info / Angle
	Options		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Multiview		Display / Media
	Vol+		Vol+
	List		Shift + Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





	Original		Replacement		Original		Replacement
	CH-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	0		0				
	Text		Text / Goto				

