








 
 

 
 











 



 



 


 
 







 


 
 


 
 

 




 


 








Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause
 Input	 AV	 I<<	 I<<
 Function	 D. Menu	 <<	 <<
 Sleep	 Sleep	 >>	 >>
 Title	 List	 >>I	 >>I
 Display	 Info	 Tv-HT SPK	 Smart
 Menu	 Menu	 Vol+	 Vol +
 Up	 Up	 Vol-	 Vol -
 Setup	 Options	 Mute	 Mute
 Down	 Down	 EQ	 Dual
 Right/Tun+	 Right	 VSM	 Format
 Left/Tun-	 Left	 Repeat	 Text
 Enter	 Ok	 Subtitle	 Subt
 Return	 Back	 1	 1
 REC	 Rec	 2	 2
 Stop	 Stop	 3	 3
 Play	 Play	 4	 4





Original		Replacement	
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prog.Memo	+	Shift + Sleep
	Clear		Exit
	RDS		3D
	PTY		Pre Ch
	TV Power	+	Shift + Power
	TV Prog-		Ch -
	TV Prog+		Ch +
	TV Input	+	Shift + AV
	TV Vol+	+	Shift + Vol +
	TV Vol-	+	Shift + Vol -

Original	Replacement

