 




 


 




 

 


 

 

 

 
 





Original	Replacement
 Power	 Power
 Eject	 Eject / Surround
 Tv/Radio	 TV/Radio /
 Red/Goto	 Red / Netflix / Search
 Green/Angle	 Green / APP / Repeat
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Blue/A-B	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Text	 Text / Goto
 Hold/Freeze	 Shift + Stop /
 D.Menu/Guide	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 Zoom/Size	 Zoom / Size
 Aspect	 Shift + Picture / Format
 Subpage	 Smart / List
 Media	 Shift + Display / Media
 Pause	 Pause / Step / Freeze

Original	Replacement
 Play	 Play / Slow
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 D.Setup	 Setup / OPT /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<< / Preset-	 I<< / Preset-
 >>I / Index	 >>I / Preset+
 Menu	 Menu / Home
 Up	 Up
 Lang/Audio	 Audio / Lang I/II
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Title/Exit	 Exit / Cancel / Clear





Original		Replacement	
[+ VOL]	Vol+	[+ VOL]	Vol+
[MUTE]	Mute	[DIMMER MUTE]	Mute / Dimmer
[+ CH]	CH+	[+ CH PAGE]	CH+ / Page+
[VOL -]	Vol-	[VOL -]	Vol-
[DISPLAY]	Display	[MEDIA DISPLAY]	Display / Media
[CH -]	CH-	[CH PAGE -]	CH- / Page-
[1]	1	[TV 1]	1
[2]	2	[DVD 2]	2
[3]	3	[CD - STB 3]	3
[4]	4	[VIDEO 4]	4
[5]	5	[TAPE 5]	5
[6]	6	[TUNER 6]	6
[7]	7	[AUX - HDD 7]	7
[8]	8	[USB 8]	8
[9]	9	[BLUETOOTH 9]	9
[/--]	-/--	[GUIDE EPG]	Guide / EPG / -/--
[0]	0	[HDMI - BAT 0]	0

Original		Replacement	
[RECALL]	Recall	[RETURN BACK]	Back / Return
[SOURCE]	Source	[RDS AV INPUT]	AV / Input / RDS
[P-MODE]	P.Mode	[FORMAT PICTURE]	Picture / Format
[S-MODE]	S.Mode	[TITLE SOUND]	Sound / Title

