



Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 Mute	 Mute	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Menu	 Menu
 8	 8	 Exit	 Exit
 9	 9	 FAV	 Pre Ch
 0	 0	 SUBT	 Subt
 i	 INFO	 EPG	 Guide
 Recall	 BACK	 List	 List
 Vol+	 Vol +	 [≡]/Text	 Text
 Vol-	 Vol -	 [≡+]/Hold	 Options
 Nicam	 SMART	 [▼]/PgDn	 Shift + Ch -





Original	Replacement	Original	Replacement
PGUP [▲]/Pg Up	SHIFT + + CH Shift + Ch +		
INDEX [≡i]/Index	SHIFT + DISPLAY INFO Shift + Info		
SIZE [≡◆]/Size	PICTURE FORMAT Format		
REVEAL [≡?]/Reveal	ECO 3D 3D		
SUBPAGE [≡o]/Subpage	APP MEDIA Media		
RED Red	A Red		
GREEN Green	B Green		
YELLOW Yellow	C Yellow		
CYAN Cyan	D Blue		
SLEEP Sleep	PROG SLEEP Sleep		
TV-RADIO Tv/Radio	SEARCH TV/R TV/R		
AUDIO Audio	SOUND DUAL Dual		
P-MODE P.Mode	SHIFT + PICTURE FORMAT Shift + Format		

