







Original	Replacement	Original	Replacement
 Standby	 Power	 Vol+	 Vol +
 Open/Close	 Eject	 Vol-	 Vol -
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Enter	 Ok
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Red	 Red
 9	 9	 Green	 Green
 0	 0	 Yellow	 Yellow
 Info/Display	 Info	 Blue	 Blue
 Q-Play/Tv/Radio	 TV/R	 Next	 >>
 Menu/PgDn	 Menu	 Prev	 <<
 Setup	 Options	 Rew	 <<
 Exit/Slow	 Exit	 FF	 >>





Original		Replacement		Original		Replacement	
	Play		Play		Random		Sleep
	Stop		Stop		Mute		Mute
	Pause		Pause		USB		Smart
	Subtitle		Subt				
	Audio		Dual				
	List/PBC		List				
	Title/PgUp		D. Menu				
	Return		Back				
	Rec/Repeat		Rec				
	PVR/Zoom	+	Shift + Eject				
	FAV/A-B		Pre Ch				
	Video		AV				
	TTX/Search		Text				
	DVD/DVB		Media				
	Step		Format				
	EPG/P/N		Guide				
	Angle		3D				

