



Original	Replacement	Original	Replacement
	Power		0
	Text / Goto		AV / Input / RDS
	Shift + Info / Angle		Shift + D.Menu / Top Menu
	Subtitle / EQ		Guide / EPG / -/--
	Stop / Hold		Shift + Setup / OPT / Tools
	Sleep / Timer		TV/Radio /
	Zoom / Size		Shift + Down
	1		Vol+
	2		CH+ / Page+
	3		Shift + AV / Input / RDS
	4		Mute / Dimmer
	5		Vol-
	6		CH- / Page-
	7		Eject / Surround
	8		D.Menu / Top
	9		Smart / List
	Back / Return		Info / Angle





Original	Replacement	Original	Replacement
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	End		Exit / Cancel / Clear
	Down		Down
	Return		Shift + Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	truD		Shift + Text /
	Sleep		Shift + Sleep / Timer
	[<>]		Picture / Format
	OPC		Setup / OPT /
	Action		Display / Media

