

 

 



 



 

 

 

 

 

 





 





 
 






 
 


 

 

 





 

 







 





Original	Replacement	Original	Replacement
 Power	 Power	 Return	 Back / Return
 i	 ANGLE INFO	 +	 + VOL
 1	 TV 1	 -	 - VOL
 2	 DVD 2	 ▲	 ▲
 3	 CD - STB 3	 ▼	 ▼
 4	 VIDEO 4	 ►	 ►
 5	 TAPE 5	 ◀	 ◀
 6	 TUNER 6	 ENTER/ CH LIST	 LIST SMART
 7	 AUX - HDD 7	 ENTER/ CH LIST	 OK
 8	 USB 8	 P +	 + CH PAGE
 9	 BLUETOOTH 9	 P -	 - CH PAGE
 0	 HDMI - BAT 0	 AUDIO I/II	 LANG I/II AUDIO
 INPUT SELECT	 RDS AV INPUT	 TEXT	 GOTO TEXT
 PICTURE SIZE	 FORMAT PICTURE	 P <--> P	 PC FAV MARKER
 GUIDE (EPG)	 -/-- GUIDE EPG	 [≡?]	 PROGRAM TV/RADIO /
 MUTE	 DIMMER MUTE	 SUBTITLE	 EQ SUBTITLE
 MENU	 HOME MENU	 FREEZE	 STEP - FREEZE II





	Original	Replacement	Original	Replacement
	Size	 Zoom / Size		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		

