



Original	Replacement	Original	Replacement
	Power		Power
	SD Card		Media
	Input TV		TV/R
	Input AV		AV
	Menu		Menu
	[+]/Aspect		Format
	Internet		Smart
	Direct Tv Rec		Eject
	i		Info
	Exit		Exit
	Viera Link		List
	Guide		Guide
	Viera Tools		D. Menu
	Option		Options
	Return/Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]/Text		Text
	[≡♦]/Sttl		Subt
	[≡i]/Index		3D
	[≡+]/Hold		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original	Replacement
7	7
8	8
9	9
0	0
Last View	Pre Ch
Vol+	Vol +
Vol-	Vol -
Mute	Mute
CH+	Ch +
CH-	Ch -
Power DVD/VCR	Shift + Power
Rec DVD/VCR	Rec
Programme Down DVD/VCR	Shift + Ch -
Programme Up DVD/VCR	Shift + Ch +
Play DVD/VCR	Play
Stop DVD/VCR	Stop
Pause/Step	Pause

Original	Replacement
<</ <<	<<
>>/>>	>>
Power Tv	Shift + Ok
Rec Tv (Down)	Shift + Rec
Programme Down Tv (Down)	Shift + Down
Programme Up Tv (Down)	Shift + Up
Play Tv (Down)	Shift + Play
<</ << Tv	<<
>>/>> Tv	>>
Pause/Step Tv (Down)	Shift + Pause
Stop Tv (Down)	Shift + Stop



DVD/VCR