




Original	Replacement
 Power	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 3D
 S.Mode	 Shift + Dual
 Audio/I-II	 Dual
 P.Size	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Menu	 Menu
 Info	 Info
 Exit	 Exit
 FAV.CH	 Pre Ch
 Sleep	 Sleep
 Jump	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Red/D.Setup	 Red
 Green/Repeat	 Green





Original	Replacement
Yellow/zoom	Yellow
Blue/Goto	Blue
PVR List	List
Time Shift	Smart
USB/SD	Media
DTV/Radio	TV/R
DVD Menu	D. Menu
Text	Text
Subtitle	Subt
Guide	Guide
Rec	Rec
Stop	Stop
Play	Play
Pause	Pause
Open/Close	Eject
<<<	<<<
>>>	>>>

Original	Replacement
I<<<	I<<<
>>>I	>>>I

