 




 



 

 


 



 









| Original  | Replacement   |
|---|---|
|  Power     |  Power           |
|  1         |  1               |
|  2         |  2               |
|  3         |  3               |
|  4         |  4               |
|  5         |  5               |
|  6         |  6               |
|  7         |  7               |
|  8         |  8               |
|  9        |  9              |
|  List    |  Smart / List  |
|  0       |  0             |
|  Vol+    |  Vol+          |
|  Mute/AD |  Mute / Dimmer |
|  P+      |  CH+ / Page+   |
|  Vol-    |  Vol-          |
|  P-      |  CH- / Page-   |

| Original  | Replacement   |
|---|---|
|  Home/Recent |  Menu / Home             |
|  Up          |  Up                      |
|  Guide       |  Guide / EPG / -/--      |
|  Left        |  Left                    |
|  Wheel Up    |  >>  / Preset+           |
|  Right       |  Right                   |
|  OK          |  OK                      |
|  Wheel Down  |   << / Preset-           |
|  Back        |  Back / Return           |
|  Down       |  Down                   |
|  Exit      |  Exit / Cancel / Clear |
|  3D        |  Picture / Format      |
|  Source    |  AV / Input / RDS      |
|  *         |  D.Menu / Top          |
|  Text      |  Text / Goto           |
|  T.Opt     |  Setup / OPT /         |
|  Play      |  Play / Slow           |



