




 




 

 

 


 

 
 

 








Original	Replacement
 Power	 Power
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide
 Back	 Back

Original	Replacement
 Source	 AV
 Menu	 Menu
 Info	 Info
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Aspect	 3D
 CH+	 Ch +
 CH-	 Ch -
 Play/Pause/EPG	 Play
 Stop/FAV	 Stop





Original		Replacement		Original	Replacement
	Eject/Add/Del		Pre Ch		
	Media		Media		
	[.≡]/I<</TTX		Text		
	[≡x]/<</Cancel		TV/R		
	[≡♦]/Title/Size		Format		
	Subtitle		Subt		
	[≡+]/>>/Hold		Options		
	[≡?]/>>/Reveal		Eject		
	[≡o]/Menu/Subpa		D. Menu		
	[≡i]/Audio/Index		List		
	Red/Goto		Red		
	Green/Slow		Green		
	Yellow/Repeat		Yellow		
	Blue/A-B		Blue		
	DVD Setup		Smart		

