

 

 
 

 





 

 

 

 



 



 



 

 
 
 


 
 

 





 


 
 
 


 



 
 


 
 

 
 




Original		Replacement		Original		Replacement	
	Power		Power		Pause/Step		Pause
	Open/Close		Eject		Play		Play
	1		1		Stop		Stop
	2		2		DVD Menu		D. Menu
	3		3		Title		Smart
	4		4		Display		Info
	5		5		Return		Back
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Enter		Ok
	Clear		Exit		O)/Audio		Dual
	>>		>>		[...]/Subtitle		Subt
	<<		<<		Camera/Angle		3D
	>>		>>		Setup		Options
	<<		<<		Marker		Media





Original	Replacement	Original	Replacement
	Search		TV/R
	Program		Sleep
	Zoom		Shift + Eject
	Repeat		Text
	A-B		Guide
	Resolution		Green
	*		Pre Ch
	Power Tv		Shift + Power
	PR+ Tv		Ch +
	PR- Tv		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	AV Tv		AV

