



 



 



 
 




 

 
 



 



 

 



 
 


 
 
 
 


 






 





 
 
 



 







Original	Replacement	Original	Replacement
 Power	 Power	 Vol +	 Vol +
 1	 1	 Vol -	 Vol -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Menu	 Menu
 8	 8	 Exit / Return	 Exit
 9	 9	 Red / Zoom	 Red
 0	 0	 Green / Repeat	 Green
 AV	 AV	 Yellow / Root	 Yellow
 Text	 Text	 Blue / Title	 Blue
 EPG	 Guide	 Subtitle	 Subt
 P+	 Ch +	 Screen	 Smart
 P-	 Ch -	 Presets	 Options
 Mute	 Mute	 <<	 <<





Original		Replacement		Original		Replacement	
	Play		Play				
	>>		>>				
	Rec		Rec				
	Stop		Stop				
	Pause		Pause				
	I<<		I<<				
	C		Shift + Yellow				
	>>I		>>I				
	Display		Shift + Info				
	Mode / Search		TV/R				
	Angle		3D				
	Swap		Pre Ch				
	Lang		Dual				
	Info		Info				

