


 




 

 
 
 

 






 
 
 



 

 


 




Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV
 CH/TR+	 Ch +
 CH/TR-	 Ch -
 Rec/OTR	 Rec
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play/Slow	 Play
 Pause/Still	 Pause
 Stop	 Stop
 >>	 >>
 <<	 <<
 Index	 Info
 Cancel	 Exit
 Menu	 Menu
 Timer Rec	 Shift + Rec
 Program	 Sleep
 Call	 Pre Ch
 Clock/Counter	 Smart
 Counter Reset	 Media
 Zero Return	 Back



