



Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Up	 Up	 -/--	 Guide
 Down	 Down	 PP	 Back
 Right	 Right	 P/CH+	 Ch +
 Left	 Left	 P/CH-	 Ch -
 OK	 Ok	 P<P	 Pre Ch
 M	 Menu	 Vol+	 Vol +
 [i]	 Info	 Vol-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 I-II	 Dual
 3	 3	 TV	 TV/R
 4	 4	 AV	 AV
 5	 5	 Red/Sound	 Red
 6	 6	 Green/Picture	 Green
 7	 7	 Yellow/Feature	 Yellow
 8	 8	 Blue/Install	 Blue
 9	 9	 [≡]	 Text





Original	Replacement	Original	Replacement
 [=o]	 Smart		
 [=+]	 Format		
 [=x]/[· ·]	 3D		
 [/≡]/[*]	 Subt		
 [=♦]/[+]	 Options		
 [=?]/PC	 Media		
 [=i]	 List		

