



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Up		Up		-/--		Guide
	Down		Down		PP		Back
	Right		Right		P/CH+		Ch +
	Left		Left		P/CH-		Ch -
	OK		Ok		P<P		Pre Ch
	M		Menu		Vol+		Vol +
	[i]		Info		Vol-		Vol -
	1		1		Mute		Mute
	2		2		I-II		Dual
	3		3		TV		TV/R
	4		4		AV		AV
	5		5		Red/Sound		Red
	6		6		Green/Picture		Green
	7		7		Yellow/Feature		Yellow
	8		8		Blue/Install		Blue
	9		9		[≡]		Text





Original	Replacement	Original	Replacement
 [≡o]	 Smart		
 [≡+]	 Format		
 [≡x]/[· ·]	 3D		
 [ /≡]/[ *]	 Subt		
 [≡◆]/[+]	 Options		
 [≡?]/PC	 Media		
 [≡i]	 List		

