



Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	CH List		List
	Smart Hub		Smart
	Menu		Menu
	Search		TV/R
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red
	Green		Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 Social TV	 Media		
 HDMI	 Subt		
 3D	 3D		
 E-Manual	 D. Menu		
 P.Size	 Format		
 SRS	 Dual		
 <<<	 <<<		
 I<<<	 I<<<		
 Pause	 Pause		
 >>>	 >>>		
 >>>I	 >>>I		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

