

 


 
 
 
 
 
 
 


 

 
 
 

 



 
 
 
 

 











 
 






 

 
 
 
 
 

 
 
 
 
 

 








Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Function		Menu
	Sound		Dual
	EQ		Subt
	DVD		Media
	1/Timer On/Off		1
	2/Timer/Clock		2
	3/Sleep		3
	4/Disc Menu		4
	5/Title Menu		5
	6		6
	7		7
	8/SYNC		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	I<<</RDS PTY		I<<<
	>>>I		>>>I
	<<<		<<<
	>>>/RDS Display		>>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Repeat		Text
	Home		Smart
	USB Rec		Rec
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up/Tuning Up		Up
	Down/Tuning		Down



Down



Original		Replacement		Original		Replacement	
	Right/#		Right				
	Left/b		Left				
	Enter		Ok				
	Red/Display		Red				
	GreenMo/ST		Green				
	Yellow		Yellow				
	Blue/Keycon		Blue				
	Speed/CD Rec		3D				
	My Karaoke		TV/R				
	Mic Vol+		Ch +				
	Mic Vol-		Ch -				

