



Original		Replacement		Original		Replacement	
	Power		Power		DVD VOL+		Right
	Mute		Mute		DVD VOL-		Left
	Setup/EPG		Options		Repeat/TV-R		TV/R
	DVD/AV/DTV		Media		Program/Text		Text
	DVD/USB/CARD		AV		1		1
	OSD/Info		Info		2		2
	↔/Search		Back		3		3
	Audio		Dual		4		4
	Subtitle		Subt		5		5
	Menu		Menu		6		6
	Exit/Title		Exit		7		7
	FAV/Zoom		Pre Ch		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0/10		0
	VOL+		Vol +		10+		Guide
	VOL-		Vol -		Stop		Stop
	OK		Ok		Play		Play





	Original	Replacement		Original	Replacement
	Pause		Pause		
	Prev/Red		Red		
	Next/Green		Green		
	Rev/Yellow		Yellow		
	Fwd/Blue		Blue		

	Original	Replacement		Original	Replacement

