



 










 



 


 

 


 
 

 


 

 



 

 

 


 










 
 
 








 

 




Original	Replacement	Original	Replacement
 Standby	 Power	 Source	 AV
 Off	 Shift + Power	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Magicinfo/Lite/S	 Media
 3	 3	 Menu	 Menu
 4	 4	 Blank	 Pre Ch
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 _/~/Del	 Guide	 Right	 Right
 Mute	 Mute	 Left	 Left
 Vol+	 Vol +	 Enter	 Ok
 Vol-	 Vol -	 Red/PC	 Red
 Content (Home)	 Smart	 Green/DVI	 Green





Original		Replacement		Original		Replacement	
	Yellow/HDMI		Yellow				
	Blue/DP		Blue				
	Magicinfo		TV/R				
	3D		3D				
	Lock		Eject				
	Stop		Stop				
	<</ <<		<<				
	Play		Play				
	Pause		Pause				
	>>/>>		>>				

