



Original	Replacement	Original	Replacement
Power	Power	Vol+	Vol +
TV/AV	AV	Vol-	Vol -
1	1	Mute	Mute
2	2	CH+	Ch +
3	3	CH-	Ch -
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	OK	Ok
9	9	Sys Menu	Menu
0	0	Display	Shift + Info
-/--	Guide	TV/TXT	Text
Timer	Shift + AV	Cancel	Smart
Picture	Shift + Format	Reveal	Options
Sound	Shift + Dual	Nicam/A2	Subt
Return	Back	Hold/Prog-	I<<

Original	Replacement	Original	Replacement
Power	Power	Vol+	Vol +
TV/AV	AV	Vol-	Vol -
1	1	Mute	Mute
2	2	CH+	Ch +
3	3	CH-	Ch -
4	4	Up	Up
5	5	Down	Down
6	6	Right	Right
7	7	Left	Left
8	8	OK	Ok
9	9	Sys Menu	Menu
0	0	Display	Shift + Info
-/--	Guide	TV/TXT	Text
Timer	Shift + AV	Cancel	Smart
Picture	Shift + Format	Reveal	Options
Sound	Shift + Dual	Nicam/A2	Subt
Return	Back	Hold/Prog-	I<<



