



Original	Replacement
Standby/On	Power
1/5Beam	1
2/ST+3Beam	2
3/3Beam	3
4/Stereo	4
5/My Beam	5
6/My Sur.	6
+10	Guide
Sur Decode	Pre Ch
Vol+	Vol +
Vol-	Vol -
CH Level	Info
Menu	Menu
Test	Exit
Return	Back
Up	Up
Enter	Ok

Original	Replacement
Down	Down
Right	Right
Left	Left
Tv Vol+	Shift + Vol +
Tv Vol-	Shift + Vol -
Tv Mute	Shift + Mute
Mute	Mute
Tv Input	AV
<< DVD	<<
Stop DVD	Stop
>> DVD	>>
I<< DVD	I<<
>>I DVD	>>I
Pause DVD	Pause
Play DVD	Play
Power AV DVD	Shift + Power
VCR	Green





Original	Replacement
TV	TV/R
DVD	Blue
STB	Yellow
AUX	Red
Tv Input 1	List
Tv Input 2	Dual
Vol Mode	Subt
Auto Setup	Options
Input Mode	Format
Sleep	Sleep
Power TV	Media
Power AV VCR	Smart
CH+ VCR	Ch +
CH- VCR	Ch -
Stop VCR	Shift + Stop
Pause VCR	Shift + Pause
Play VCR	Shift + Play

Original	Replacement
>> VCR	Shift + >>
Stop Tv	Shift + Left
<< VCR	Shift + <<
Pause Tv	Shift + Right
Power AV AUX	Shift + Smart
Play Tv	Shift + Ok
CH+ AUX	Shift + Ch +
CH- AUX	Shift + Ch -
CH+ Tv	Shift + Up
CH- Tv	Shift + Down
<< Tv	Shift + I<<
>> Tv	Shift + >>I
I<< Tv	Text
>>I Tv	3D



















Original	Replacement
 Power Tv	 Power
 Standby/On	 Shift + Power
 AUX	 Red
 Vol Mode	 Subt
 Auto Setup	 Options
 Input Mode	 Format
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 +10	 Guide
 Sur Decode	 Pre Ch
 CH Level	 Info
 Menu	 Menu
 Test	 Exit
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -
 Tv Mute	 Mute
 Tv Input	 AV





Original	Replacement	Original	Replacement
 <<	 <<		
 Stop	 Stop		
 >>	 >>		
 I<<	 I<<		
 Pause	 Pause		
 >>I	 >>I		
 Play	 Play		

